




---

**Dellonda Outdoor Chiminea, Fireplace, Fire Pit,  
Heater, Durable Black /Corten Steel**

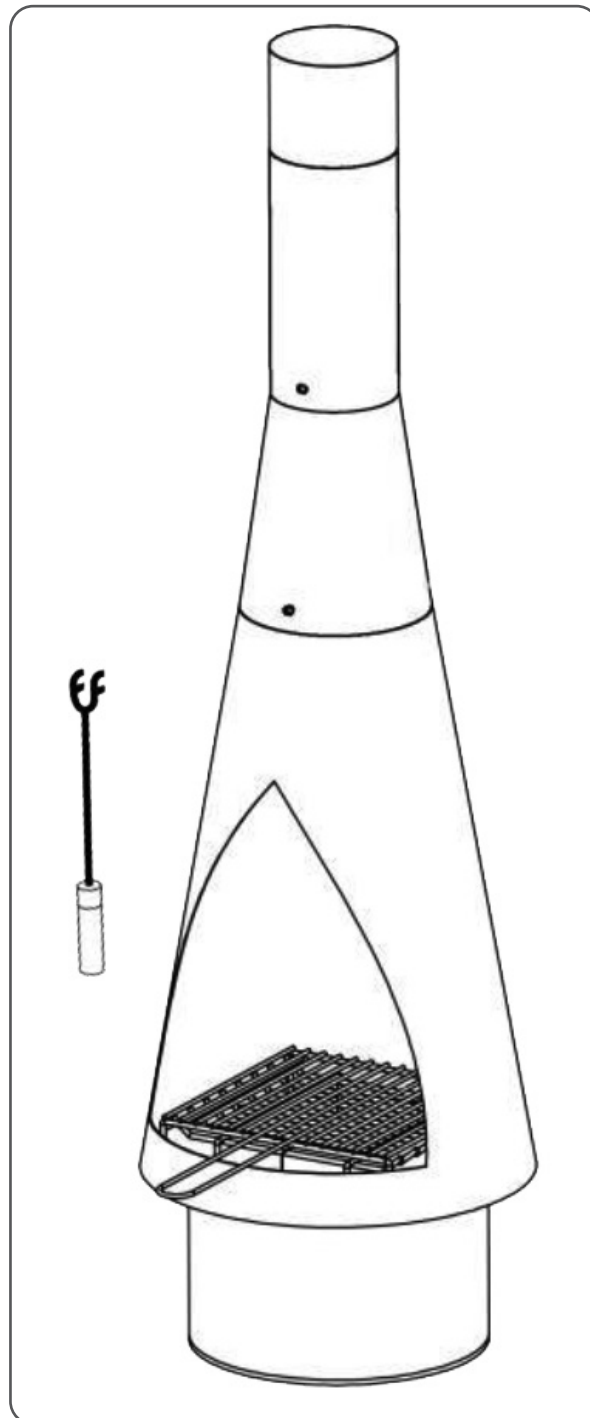

**Model No's. DG109, DG110**

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

## Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.

**Specification:** Diameter 370mm , Height 1270mm.

## About the Product

Stylish chiminea is perfect for relaxing outdoors with family and friends. Charcoal grate and mild steel chromed grill accessory gives you the option of cooking/grilling. Suitable for use with untreated wood, logs and charcoal. Height: 1270mm. Some simple assembly is required. Also available in Corten steel design to give your garden a rustic aura.



Refer to instruction manual



Wear Gloves



Warning Hot Surface

## Safety Instructions

- This product is intended **FOR OUTDOOR USE ONLY**.
- **NEVER** leave a burning fire unattended.
- **FIRE HAZARD** – Hot embers may emit while in use.
- **DO NOT** use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to light a fire.
- This product is **ONLY** suitable for use with untreated wood, logs, or charcoal.
- **DO NOT** use this chiminea on decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark.
- Always assess the weather conditions and wind direction, a gusty day can make a fire burn more fiercely, causing it to flare up unexpectedly.
- Ensure that the chiminea is positioned at least 2 metres away from flammable items or wooden walls.
- **DO NOT** handle or move the chiminea whilst alight as it will become hot.
- Keep children and pets at a safe distance from the chiminea when in use.

## Care and Use


- Ensure that the chiminea is positioned on a flat, level, heat resistant non-flammable surface away from flammable items.
- Ensure chiminea has a minimum of 2m overhead clearance and has a minimum of 2m clearance from other surrounding items.
- Decide on the location as above. The chiminea is heavy. Always ensure that it is positioned on a level surface and is completely stable before use. It is recommended the unit is not moved once positioned and must not be moved while in use.
- The chiminea surface will age and discolour naturally from first use. This is to be expected.
- If the product has a wood storage compartment, **DO NOT** over fill it in case it catches light.
- Any scratches or marks should be treated with a suitable touch up paint and it is advised the chiminea is stored in a dry location in the off season to prolong the lifespan.

## Contents

No.	Parts	Qty.
A	Stainless Steel Flue	1
B	Flue	1
C	Top Body	1
D	Body	1
E	Base Section	1
F	Fire Grate	1
G	BBQ Grill Rack	1
H	Poker	1
I	M5 x 12mm Bolts	6
J	M6 x 12mm Bolts	3

## Assembly

- Ensure you have enough space to assemble the unit and lay a card or protective sheet down to assemble the unit on.
- Place the stainless steel flue (A) onto the main flue (B).
- Secure this flue section onto the Top Body section (C) using 3x M5 x 12mm bolts (I).
- In-turn locate this onto the main Body section (D) align the holes and secure using 3x M5 x 12mm bolts (I).
- The assembled chiminea section can now be offered onto the Base Section (E) align the holes and bolt together using 3 off M6 x 12mm bolts (J).
- Tighten all fixings.
- Place the Fire Grate (F) into the fire pit
- Place the **BBQ Grill rack** (G) over the fire grate (F) in the fire pit

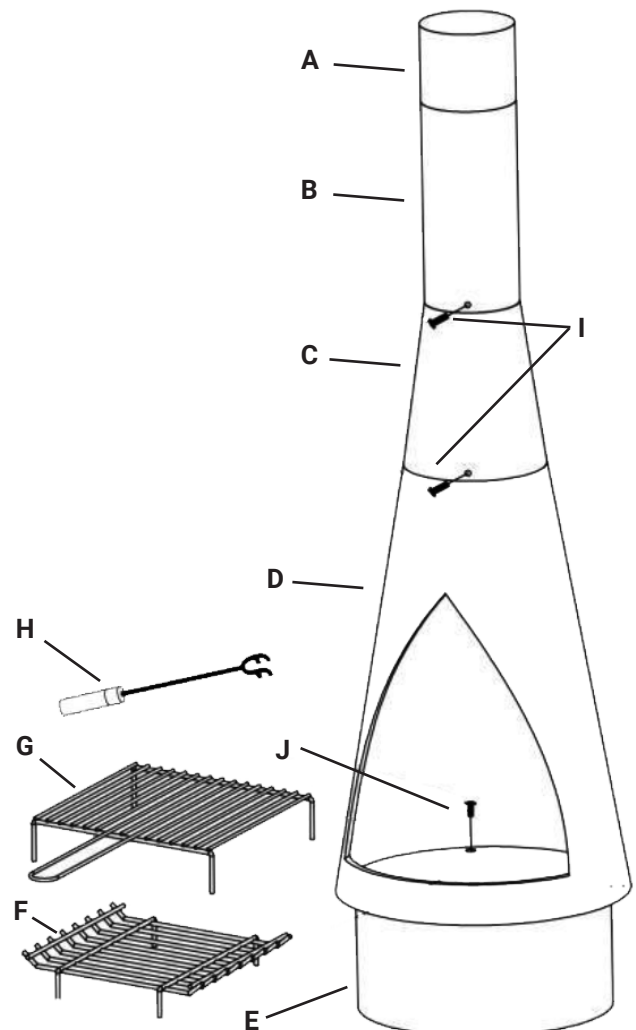

## Starting a fire

- To start a fire, place a small quantity of kindling wood and rolled newspaper in the unit. Light the paper and allow a flame to build up. Once sufficiently alight add logs or larger pieces of untreated wood to the unit to increase the heat slowly. Alternatively use fire-lighter blocks and add charcoal in the same manner.
- **DO NOT** overload the unit with fuel (untreated wood, logs, charcoal) – if the fire is too intense this could damage the chiminea.
- Always ensure that fuel does **NOT** protrude from the front opening of the chiminea.

## Cooking and Grilling

- The mild steel chromed Fire Grate and separate **BBQ** Grill rack accessory gives you the option of cooking and grilling food, Use the poker provided and **ALWAYS** wear heat protective gloves/pads when handling any hot parts.

## Extinguishing

- To extinguish the unit – stop adding fuel and allow the fire in the chiminea to die or douse with sand.
- **DO NOT** use water as this could damage the chiminea.

## Storage

- When not in use, it is recommended to cover the top of the chimney in order to prevent rainwater from entering.
- If using an outdoor cover, only position once the fire has died and the unit is completely cooled.

### Environment Protection and Waste Protection and Electrical Equipment Regulations (WEEE)

Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of it in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations.

It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Jack Sealey Ltd t/a Dellonda**, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK  
**Jack Sealey (EU) Ltd t/a Dellonda**, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland  
**Tel:** 01284 757575 • **Email:** support@dellonda.co.uk • **Web:** www.dellonda.co.uk