



FOAM GUN FOR EXPANDING FOAM CARTRIDGES

MODEL NO: **FG001**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear protective gloves



Wear Face Mask (Filtered)

1. SAFETY

- ✓ Always read the foam and cleaner manufacturers' instructions when handling and using their product in conjunction with this gun.
- ✓ Only use the gun in adequately ventilated rooms with the correct respiratory protection equipment
- ✓ Many foam products contain highly inflammable chemicals, **DO NOT** use in the proximity of any open flames, cigarettes or any other potential cause of combustion
- ✓ Always wear approved safety clothing and personal protection equipment: gloves, goggles for eye protection, a mask with the appropriate activated carbon filters when working with the foam gun.
- ✓ Keep the gun out of the reach of children.
- ✓ Maintain the gun in good condition. Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Avoid unintentional operation.
- ✗ **DO NOT** hold gun or attachments close to your face (especially eyes, ears, etc.) and **DO NOT** point gun at other persons or animals.
- ✗ **DO NOT** use the gun for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the gun if damaged.
- ✓ When not in use store in a safe, dry, childproof area.

2. INTRODUCTION

A top quality metal gun for use with gun grade polyurethane expanding foams. Screws onto the canister for quick and easy application. Easy foam gun for expanding foam adjustable flow control. Stainless steel barrel and needle.

3. SPECIFICATION

Model No.: FG001

4. OPERATION

- 4.1. Always inspect the gun before use to ensure it is not damaged. If in doubt do not use the gun and contact your Sealey Stockist.
- 4.2. Shake can vigorously for 30 seconds prior to installing on to foam gun.
- 4.3. Make sure the gun basket is perfectly clean and apply some petro-jelly or light grease to the inside of the gun basket area. This helps prevent foam from curing to the basket and gluing the can on to the gun.
- 4.4. Screw the cartridge onto the gun's adaptor until it is tight. **DO NOT** over tighten as this may cause damage to the threads.
- 4.5. Pull the trigger to start the foam flow, this may be regulated by the bead size adjuster until the desired foam bead is achieved
- 4.6. Release the trigger and tighten the size adjuster to lock the needle in the closed position, to prevent accidental discharge when the gun is not in use.
- 4.7. Always store the gun with the can attached in the normal use position.
- 4.8. Replace empty cartridges as soon as possible to avoid hardening of the foam in the gun.
- 4.9. To re-use, simply shake the foam can vigorously for 30 seconds.
- 4.10. When the cartridge is emptied unscrew it out of the foam gun socket. Clean possible dirt with cleanser and screw new cartridge in.



5. MAINTENANCE

- 5.1. If the gun is not to be reloaded it must be cleaned as soon as possible after the cartridge has been removed to avoid hardening of the foam inside the gun.
- 5.2. Once the foam has become hard solvents will not necessarily dissolve all residues.
- 5.3. Always ensure all foam is released from the gun before cleaning.
 - ✗ **DO NOT** use water to clean the gun.
- 5.4. Only clean the gun with recommended cleaning solvents, any other solvents may damage the gun.
- 5.5. Leave the solvent in the gun for 2 minutes. Release the solvent by pressing the trigger and repeat this process until the solvent

runs clear and shows no trace of foam. Unscrew the regulating knob and remove the needle, clean the needle with non abrasive cleaning solvent.

NOTE: - hardened foam will damage the needle. Remove the front nozzle with a set screw wrench and check the nozzle for hardened foam. Clean as necessary with an appropriate solvent.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk