



JUNIOR TOY TRUCK WITH TOOL KIT 64PC

MODEL NO: JTK3

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns,
perforation of soft tissue and death.

Severe burns can occur
within 2 hours of ingestion.

Seek medical attention immediately.



Not suitable for
children under
36 months



Warning!
Small parts
choking hazard

1. SAFETY

1.1. IMPORTANT! These instructions must be retained as they contain important information.

- ☐ **WARNING!** This toy and all included parts and accessories must be kept out of reach of children under 36 months.
- ☒ This product is a toy and must only be used for the purpose for which it is intended.
- ☐ **WARNING!** This toy features a hinged bonnet/lid that must be supported with the included bonnet supports when open. Care must be taken when releasing the bonnet supports so that fingers are not trapped.
- ☐ **WARNING!** This toy must be assembled by an adult.

1.2. TOYS WITH BATTERIES

- 1.2.1. Non-rechargeable batteries are not to be recharged.
- 1.2.2. Different types of batteries, or new and used batteries, are not to be mixed.
- 1.2.3. Batteries are to be inserted with the correct polarity.
- 1.2.4. Exhausted batteries are to be removed from the toy.
- 1.2.5. The Supply terminals are not to be short-circuited.
- 1.2.6. The toy is not to be connected to more than the recommended number of power supplies.

1.3. COIN AND BUTTON BATTERIES

- ☐ **WARNING!** Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention."

☐ POSSIBLE BATTERY INGESTION

☐ WARNING! NO OBVIOUS SYMPTOMS

NOTE: Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe). There are no specific symptoms associated with this. The child might:

- 1.3.1. Cough, gag or drool a lot;
- 1.3.2. Appear to have a stomach upset or a virus;
- 1.3.3. Be sick;
- 1.3.4. Point to their throat or stomach;
- 1.3.5. Have a pain in their abdomen, chest or throat;
- 1.3.6. Be tired or lethargic;
- 1.3.7. Be quieter or more clingy than usual or otherwise "not themselves";
- 1.3.8. Lose their appetite or have a reduced appetite; and
- 1.3.9. Not want to eat solid food / be unable to eat solid food.
- 1.3.10. These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.
- 1.3.11. A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help.
- 1.3.12. The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

2. INTRODUCTION

All the basics for every budding mechanic, featuring a toy truck with toy tool accessories for hands-on play and imaginative repair tasks. Engine start with lights and horn, removable wheels, four sound-enhanced gear modes (P, R, N & D), lifting engine cover and glove box for interactive role-play fun. Battery powered drill with forward and reverse motion for a range of purposes, supplied with two attachments. Requires 5 x AA batteries (not included). Suitable for children 3+ years old, BS EN 71-1 compliant.


3. SPECIFICATION

Model	JTK3	Contents
Overall Dimensions (W x D x H)	400 x 360 x 470 mm	Truck, Engine Parts (x5), Steering Wheel, Tyre (x2), Alloy (x2), Bonnet Stay (x2), Axle Stand (x2), Lower Bumper Trim, Number Plate, Glove Box Door, Suspension (x2), Oil Dipstick, Key Fob, Cordless Drill with Two Drill Attachments, Spanner, Screwdriver (x2), Cross Brace, Bolts (x28), Spark Plug Bolts (x4), Handle, Sticker Pack.
Nett Weight	3.5kg	

4. CONTENTS

fig.1

1	Truck body
2	Steering Wheel
3	Bonnet Stays (x2)
4	Glovebox Door
5	Front Grill
6	Tyres (x2)
7	Alloy Wheels (x2)
8	Engine Cover
9	Engine
10	Cross Brace (screw-driver)
11	Cross Brace (socket)
12	Remote Keyfob
13	Number Plate
14	Lower Bumper Trim
15	Crank Case and Battery
16	Shock Absorbers (x2)
17	Axle Stands (x2)
18	Oil Dipstick
19	Spanner
20	Cylinder Heads (x2)
21	Bolts (x28)
22	Spark Plugs (x4)
23	Cordless Drill/Driver
24	Screwdriver Slotted
25	Screwdriver Phillips
26	Socket Bit
27	Screwdriver Bit
28	Handle (shown fitted)
29	Sticker Pack (not shown)


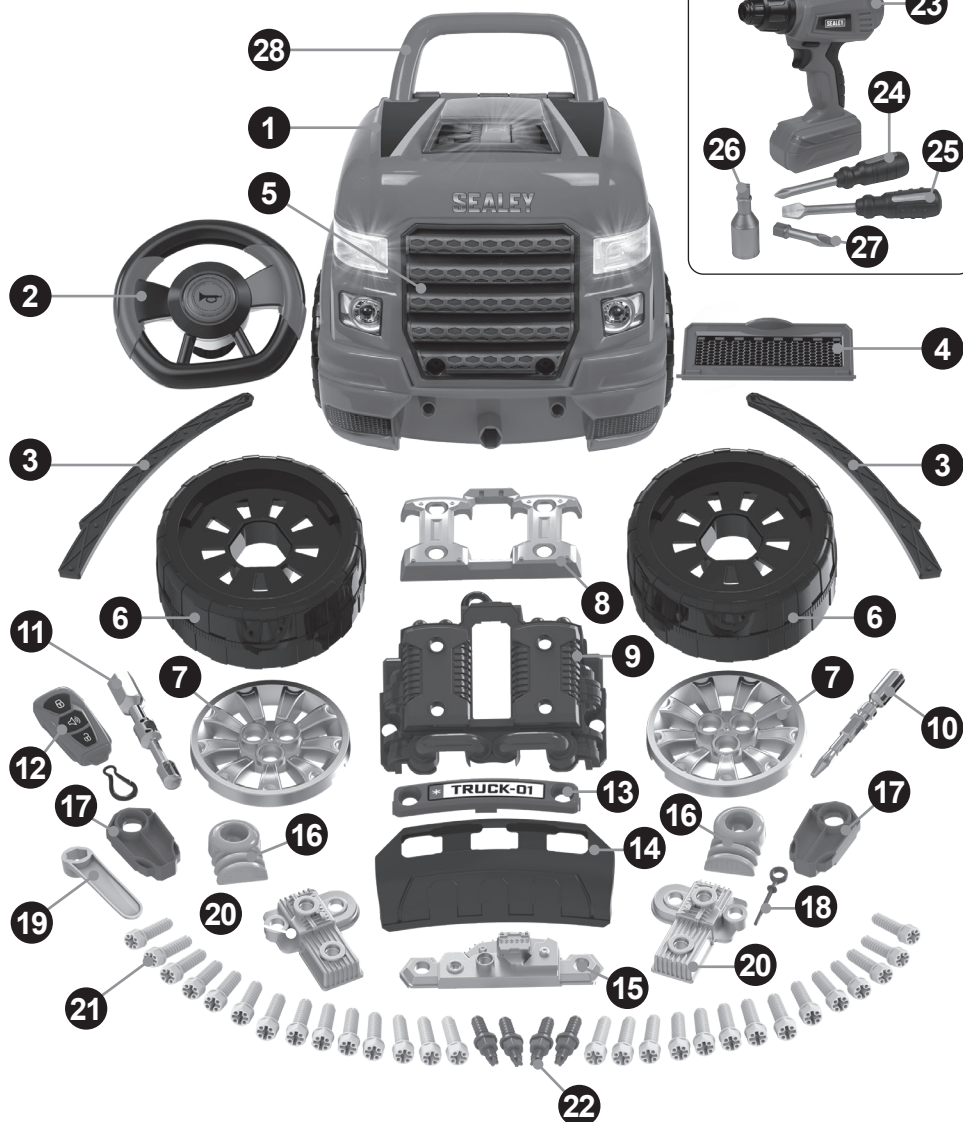


5. ASSEMBLY



5.1. BATTERY INSTALLATION AND REPLACEMENT

5.2. TRUCK BATTERY (fig.2)

5.2.1. Unscrew the truck body battery compartment cover, located on the rear of the toy, using a small crosshead screwdriver.

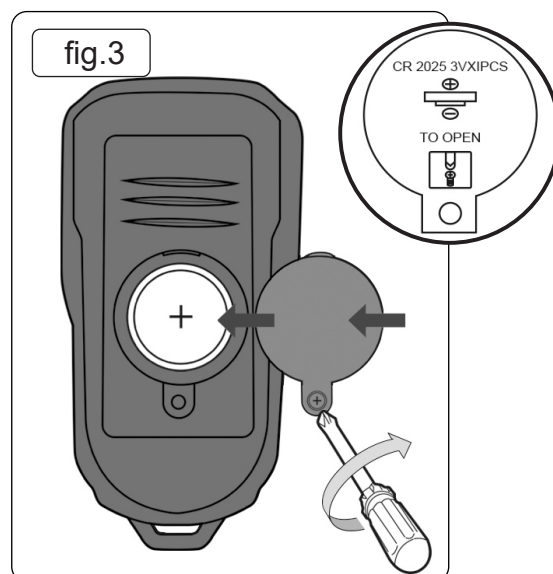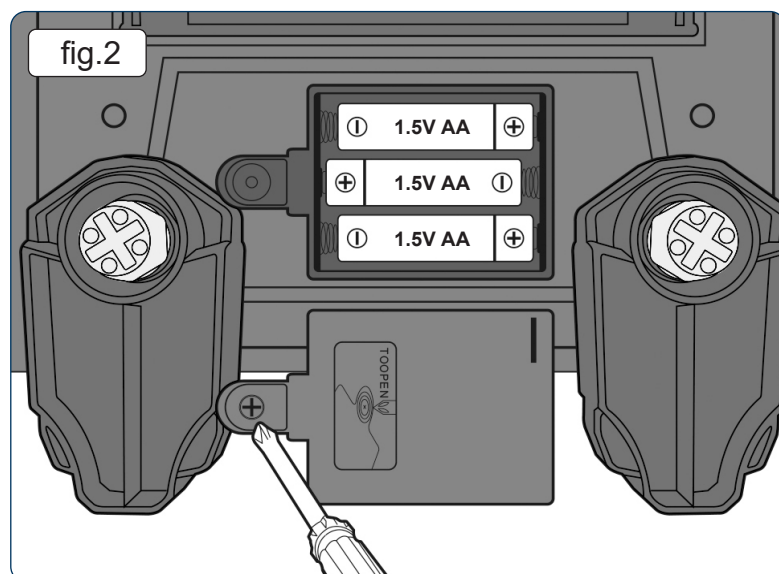

- 5.2.2. Install 3 x AA batteries (not included)
- 5.2.3. Replace the battery cover and secure with the small screw.
- 5.3. REMOTE KEYFOB BATTERY (fig.3)**
- 5.3.1. The remote keyfob is supplied with a CR2025 3V battery installed.
- 5.3.2. To replace the battery, unscrew the battery cover using a small crosshead screwdriver.
- 5.3.3. Remove the depleted battery and install a new CR2025 3V type battery. The positive/+ symbol must be facing upwards.
- 5.3.4. Replace the battery cover and secure with the small screw.
- 5.4. CORDLESS DRILL BATTERY (fig.4)**
- 5.4.1. Unscrew the cordless drill battery compartment cover, located on the base, using a small crosshead screwdriver.
- 5.4.2. Install 2 x AA batteries (not included)
- 5.4.3. Replace the battery cover and secure with the small screw.
- 5.5. STICKER PLACEMENT (fig.5)**
- 5.5.1. The toy is supplied with a sheet of stickers.
- 5.5.2. Affix the stickers as per fig.4.

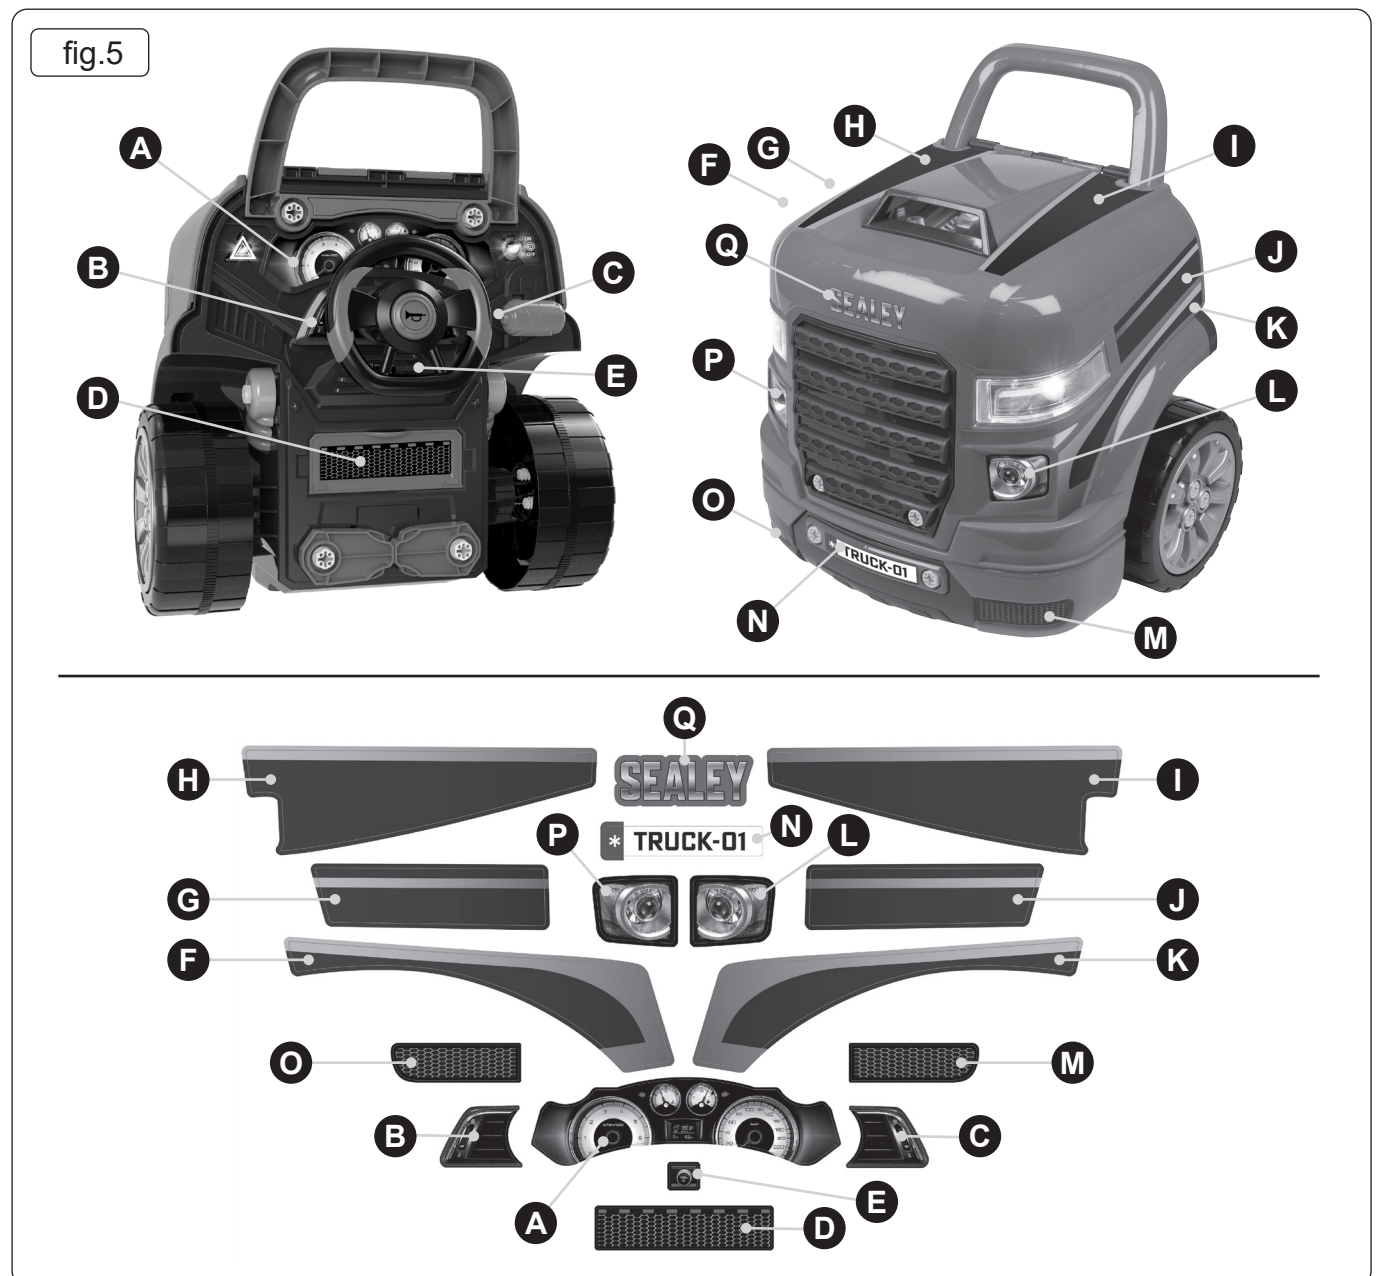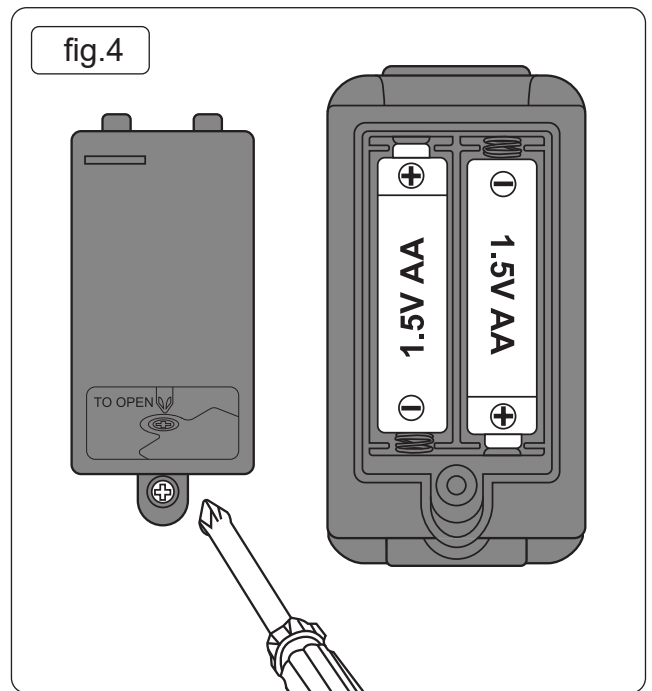

6. OPERATION

- 6.1. Please refer to the JTK3 Owner's Manual for operation, disassembly and assembly of the various features.

NOTE: The electronics will enter sleep mode/standby if no button has been pressed for more than 60 minutes. Press the Start/Stop button to wake up the electronic functions.

7. MAINTENANCE

- 7.1. Check the toy and its accessories regularly for any cracks or damage.
- 7.2. If any form of damage is found, it will depend on the type and severity of the damage whether or not the toy is deemed unsafe to use.
- 7.3. Use a soft, damp cloth to clean the truck and accessories.
- 7.4. **NOTE:** None of the battery compartments are splashproof/water resistant, so care must be taken when cleaning near those areas.
- ✖ **DO NOT** use any type of solvent or harsh abrasives to clean any part of the truck or accessories.
 - ✖ **DO NOT** immerse in water or any liquid. Water or other liquid will damage the electronic components.

8. END OF LIFE

At the end of its service life, this product must be disposed of in an environmentally responsible manner. Components such as metal parts should be recycled wherever possible. **DO NOT** discard the appliance with general household or construction waste. Please follow all local environmental regulations to ensure safe and sustainable disposal.



BATTERY REMOVAL

Battery removal: see Section 5.1. Dispose of according to local government guidelines.

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: 12 month guarantee. Proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk