



RECHARGEABLE PENLIGHT & TOUCHSCREEN STYLUS 4W COB LED

MODEL NO: **LED126**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions

1. SAFETY

1.1. GENERAL SAFETY

- ✓ Ensure the penlight torch is fully charged before initial use.
- ✗ **DO NOT** charge in damp conditions.
- ✗ **DO NOT** turn the penlight torch on when it is being charged.
- ✗ **DO NOT** shine the penlight torch beam into yours, another persons or an animals eyes.
- ✗ **DO NOT** allow children to use the penlight torch.
- ✗ **DO NOT** handle or move the penlight torch while it is being charged.
- ✗ **DO NOT** use the penlight torch if you suspect that the battery or the penlight casing is damaged.
- ✗ **DO NOT** leave battery in a discharged state. Recharge the battery immediately.
- ✓ Before storage, fully recharge the battery.
- ✓ Recharge the battery at least every six months of non-use.
- ✓ Disconnect the USB-C cable after charging.
- ✗ **DO NOT** attempt to open, disassemble, modify or service the battery.
- ✗ **DO NOT** crush, puncture or dispose of in fire or water.
- ✓ Recycle or dispose of penlight torch as stipulated by local regulation.
- ☐ **WARNING!** Keep away from extreme temperatures especially heat.
- BATTERY SAFETY**
- ☐ **WARNING!** To reduce the risk of burns or fire:
 - ✗ **DO NOT** Attempt to open, dismantle, modify or service the battery pack.
 - ✗ **DO NOT** Crush, puncture, short external contacts or dispose of in fire or water.
 - ✗ **DO NOT** Expose to temperatures above 40°C or below -10°C.
 - ✗ **DO NOT** Expose to direct sunlight for long periods of time.
 - ✗ **DO NOT** Expose to moisture.
- ☐ **WARNING! DO NOT** place the lamp face down while in use.
- ✓ Replace only with the battery pack designated for this product.
- ✓ Recycle or dispose of used battery as stipulated by local regulation.
- ✓ If the electrolyte in the cells gets on your skin, wash thoroughly with soap and water. If it gets in your eyes, rinse thoroughly with cool water and seek immediate medical attention.

2. INTRODUCTION


Compact, pocket-sized 4W COB penlight designed to illuminate confined spaces. Featuring a metal clip and magnet for hands free operation. A touchscreen stylus tip keeps mobile/tablet devices clean when your hands aren't. Dual light mode: 200lm – 1hr runtime, 100lm – 2hr runtime. 3.7V Rechargeable 400mAh Lithium-polymer battery with Type-C charging cable.

3. SPECIFICATION

Model No	LED126
Battery	3.7V 400mAh Lithium-polymer
Charging Time	2 hrs
LED Type	COB
Length	185mm
Lumen Output	High - 200lm Low - 100lm
Nett Weight	.045kg
Operating Time	High - 1hr Low - 2hr

The battery fitted to this lamp is considered to be a consumable item and its ability to accept a charge will reduce over time. We will provide warranty against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery regardless of whether it is less than one year old.

NOTE: Li-Poly batteries do not suffer from memory effect. However, for long-term storage they should be kept at around 40–60% charge, not fully charged, and checked periodically if stored for several months.

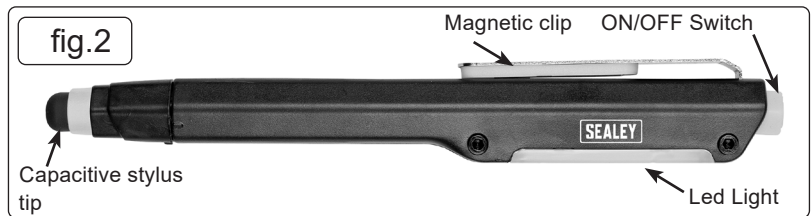

4. OPERATION

4.1. CHARGING THE PENLIGHT TORCH (fig.1)

- 4.1.1. Lift up and rotate the charging port cover and insert the USB-C cable into the charging port.
- 4.1.2. Insert the other end into either a USB wall charger, a car accessory charger or the USB port on a computer (not supplied).
- 4.1.3. While charging the battery power indicator is constant blue.
- 4.1.4. When blue light changes to green the battery is fully charged.
- 4.1.5. When the penlight torch is fully charged disconnect from the charging source. **DO NOT** leave the penlight torch on charge for long periods.

4.2. ON/OFF SWITCH (fig.2)

NOTE: The ON/OFF switch acts as a multifunctional switch to control light selection.

- 4.2.1. Press the ON/OFF button to turn on the main light.
- 4.2.2. Press the ON/OFF button a second time and the lower brightness light will then illuminate.
- 4.2.3. Press the ON/OFF button again and the penlight torch will turn off.

- **WARNING!** Be aware of the orientation of the penlight torch when turning on the light. It is recommended that you point the light towards the ground when turning on.

5. MAINTENANCE

- 5.1. After each use recharge the penlight torch.
- 5.2. After charging or usage remove all cables or connections.
- 5.3. Use a clean, dry cloth to wipe the penlight torch after use.
 - × **DO NOT** use solvents.
- 5.4. When not in use store the penlight torch in it's original packaging in a safe, clean, dry childproof location.

6. END OF LIFE

At end of life, dispose of the pen torch in accordance with local regulations for electronic waste. **DO NOT** dispose of in household waste.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



BATTERY REMOVAL

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk