



CLIP-ON FAN 2 SPEED 8" 230V

MODEL NO: **SCF8W**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

1. SAFETY

1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey Stockist.

If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.

- * **DO NOT** pull or carry the appliance by the power cable.
- * **DO NOT** pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
- * **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.

If the cable or plug is damaged during use, switch off the electricity supply and remove from use. Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.

Class II products are wired with live (brown) and neutral (blue) only are marked with the Class II symbol;




A) Connect the BROWN live wire to the live terminal 'L'.

B) Connect the BLUE neutral wire to the neutral terminal 'N'.

C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.

Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.

- * **DO NOT** connect either wire to the earth terminal.
Sealey recommend that repairs are carried out by a qualified electrician.

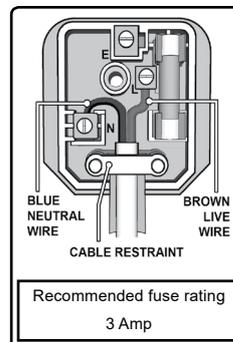

1.2. GENERAL SAFETY

- ✓ Disconnect the fan from the mains power when not in use, and before servicing or performing any maintenance.
- ✓ Use the fan in dry areas only. **DO NOT** use in wet or high condensation locations such as bathrooms, showers, or pools.
- WARNING!** If fan falls into water, immediately disconnect from the mains power supply. **DO NOT** touch the fan until the mains power supply has been disconnected.
- ✓ Always disconnect the fan from the power supply when moving it from one location to another.
- ✓ Keep the fan clean and maintained in good condition (use an authorised service agent).
- ✓ Use recommended parts only (unauthorised parts may be dangerous, and will invalidate your warranty).
- * **DO NOT** insert any objects through the fan guard.
- * **DO NOT** cover the fan.
- * **DO NOT** immerse the fan in water or any other liquid.
- * **DO NOT** allow children to operate the fan.
- * **DO NOT** place the fan where it may be knocked over easily, or where the lead may cause a person to trip.
- * **DO NOT** use the fan outdoors.
- * **DO NOT** use an extension cord unless it has been approved by an electrical authority.
- ✓ When not in use store in a safe, dry, childproof location.

Use by persons with reduced physical, sensory or mental capabilities.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they **DO NOT** play with the appliance.




2. INTRODUCTION

Clip-on fan featuring tilt and swivel head for optimum air circulation. Switch control and fully guarded fan blades for ease-of-use and extra safety. Smooth running motor powers fan blades.

3. SPECIFICATION

Model No:.....**SCF8W**
Fan Diameter:Ø203mm(8")
Height: 360mm
Maximum Airflow:..... 15m³/min
Nett Weight:0.85Kg
Power:.....20W
Speeds:.....2
Supply:.....230V

4. OPERATION

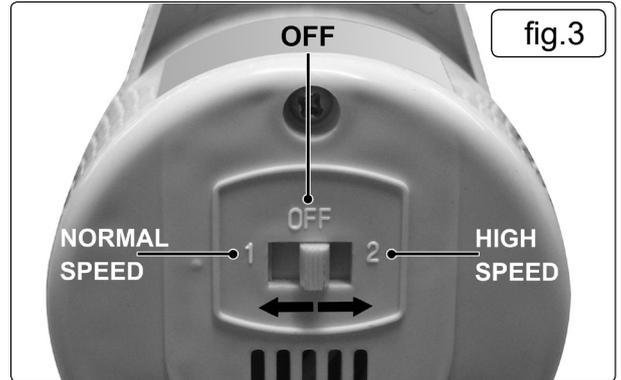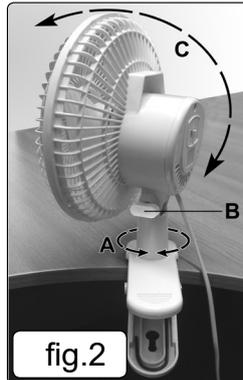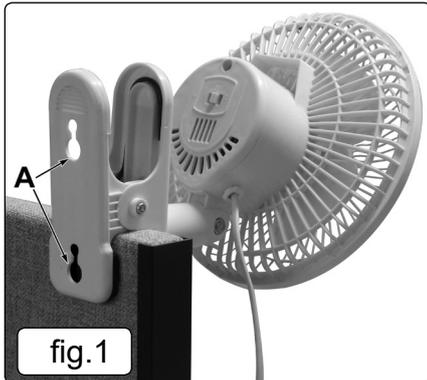

- **WARNING! Ensure you read, understand and apply the safety instructions in Section 1 before using the fan.**
 - **WARNING! DO NOT** clamp the fan to any electrical or sensitive electronic equipment or any surface or object that is too flimsy to resist the force of the spring loaded clamp and/or the weight of the fan.
- 4.1. Mount the fan in a suitable location, using the spring loaded clamp to attach it to a suitable table, shelf or other stable solid surface up to 36mm thick as indicated in figs.1 & 2.
 - 4.2. Adjust the angle of the head as indicated in fig.2C. Loosen knob 'B' and set the fan to the required angle, re-tighten the knob.
 - 4.3. If necessary, the whole fan can be rotated on the clamp as indicated in fig.2A.
 - 4.4. The fan can also be wall mounted using the keyhole slots on the clamp as shown in fig.1A.
 - 4.5. Plug the fan into the mains power supply.
 - 4.6. Move slide switch on the rear of the fan head to position "1" for normal fan speed operation, and to position "2" for high fan speed. To stop the fan, move the slide switch to the central 'OFF' position. See fig.3.

5. MAINTENANCE

IMPORTANT: Turn the fan **OFF** and disconnect from power supply before cleaning.

- ✓ Use only a soft, damp cloth to clean the fan.
- ✗ **DO NOT** submerge the fan in water and **NEVER** allow water to drip into the motor housing.
- ✗ **DO NOT** use solvents or other chemicals to clean the fan.
- ✓ Store the fan in its original box or otherwise cover the fan to protect it from dust.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

☎ 01284 757500

📠 01284 703534

✉ sales@sealey.co.uk

🌐 www.sealey.co.uk