



22PC LOCKING WHEEL NUT KEY SET - BMW

MODEL NO: **SX207.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
Instructions

1. SAFETY

- WARNING! DO NOT** use the tool if damaged or thought to be faulty.
- WARNING!** Ensure that Health & Safety, Local Authority Regulations and general workshop practice regulations are adhered to when using tools.
- WARNING!** If jacking up a vehicle refer to manufacturer's instructions for vehicle and jack.
- * **DO NOT** use the tool for a task it is not designed to perform.
- * **DO NOT** use worn, or damaged sockets.
- * **DO NOT** use the tool unless you have been instructed in its use by a qualified person.
- * **DO NOT** operate the tool if you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✓ Maintain the tool in good condition.
- ✓ Follow all workshop safety rules, regulations and conditions.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and non essential persons away from the working area.



2. INTRODUCTION

Set of twenty locking keys for the removal of locking wheel nuts on BMW vehicles. Adaptor can be used with either a 1/2" Sq drive or 21mm socket. Set includes drift to aid removal of key from adaptor. For distribution to bona fide vehicle dealers and repair centres only.

3. CONTENTS

Component	Description
SX207.V2-01	Locking Wheel Nut Socket 1/2" Dr.-BMW
SX207.V2-02	Locking Wheel Nut Bar
SX207.V2-03	Locking Wheel Nut Key. (41) - BMW
SX207.V2-04	Locking Wheel Nut Key. (42) - BMW
SX207.V2-05	Locking Wheel Nut Key. (43) - BMW
SX207.V2-06	Locking Wheel Nut Key. (44) - BMW
SX207.V2-07	Locking Wheel Nut Key. (45) - BMW
SX207.V2-08	Locking Wheel Nut Key. (46) - BMW
SX207.V2-09	Locking Wheel Nut Key. (47) - BMW
SX207.V2-10	Locking Wheel Nut Key. (48) - BMW
SX207.V2-11	Locking Wheel Nut Key. (49) - BMW

Component	Description
SX207.V2-12	Locking Wheel Nut Key. (50) - BMW
SX207.V2-13	Locking Wheel Nut Key. (51) - BMW
SX207.V2-14	Locking Wheel Nut Key. (52) - BMW
SX207.V2-15	Locking Wheel Nut Key. (53) - BMW
SX207.V2-16	Locking Wheel Nut Key. (54) - BMW
SX207.V2-17	Locking Wheel Nut Key. (55) - BMW
SX207.V2-18	Locking Wheel Nut Key. (56) - BMW
SX207.V2-19	Locking Wheel Nut Key. (57) - BMW
SX207.V2-20	Locking Wheel Nut Key. (58) - BMW
SX207.V2-21	Locking Wheel Nut Key. (59) - BMW
SX207.V2-22	Locking Wheel Nut Key. (60) - BMW

4. OPERATION

- 4.1. Choose correct locking wheel nut key for vehicle, and push into adaptor.
- 4.2. Place the key over the wheel nut/bolt and rotate until the key slots into the wheel bolt/nut.
- 4.3. Attach either a 1/2" drive or 21mm socket to the key adaptor and turn anti-clockwise to remove wheel bolt/nut.
- 4.4. Use drift to aid removal of key from adaptor.
- 4.5. Replace key, adaptor and drift in carry case after use.
- 4.6. To replace bolt/nut reverse removal operation. Use a torque wrench to tighten.

5. MAINTENANCE

- 5.1. Keep keys and adaptor clean and store in case provided.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk