



# 10 TONNE FLOOR TYPE HYDRAULIC PRESS

MODEL NO: YK10F.V3

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear a face shield



Wear safety footwear



Wear protective gloves



Wear protective clothing



Warning: Crushing of hands

## 1. SAFETY

- ✓ Familiarise yourself with the applications, limitations and hazards of the press.
- ✓ Maintain the press in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the press clean for best and safest performance.
- ✓ Locate the press in an adequate working area for its function, keep area clean and tidy and free from unrelated materials and ensure there is adequate lighting.
- ✓ Ensure the workpiece is correctly secured before operating the press.
- ✓ Ensure that all fittings are tight before each use.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings, other loose jewellery and contain long hair.
- ✓ Keep hands and body clear of the table when operating the press.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ Securely attach the press to a flat, firm, level surface capable of supporting the weight of press and any workpiece taking into account clearance for workpieces.
- ✓ When not in use, release pressure from the hydraulic unit and clean the press. Stand or store the arbor plates in a safe location.
- ✗ **DO NOT** operate the press if any parts are missing as this may cause failure and/or possible personal injury.
- ✗ **DO NOT** use the press for a task it is not designed to perform.
- ✗ **DO NOT** make any modifications to the press.
- ✗ **DO NOT** exceed the rated capacity of the press.
- ✗ **DO NOT** apply off-centre loads.
- ✗ **DO NOT** allow the workpiece or the arbor plates to fall from the table.
- ✗ **DO NOT** get the press wet or use in damp or wet locations or areas where there is condensation.
- ✗ **DO NOT** operate the press when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** climb upon the press.
- ✗ **DO NOT** use the press to compress a spring or any other item that could disengage and cause a potential hazard including personal injury.
- ✗ **DO NOT** stand directly in front of a loaded press and never leave a loaded press unattended.
- ✗ **DO NOT** allow untrained persons to operate the press.
- ☐ **WARNING!** Always wear approved eye or face protection when operating the press. A full range of personal safety equipment is available from your Sealey stockist.
- ☐ **WARNING: DO NOT** top up hydraulic unit with brake fluid, or any other fluid other than a good quality hydraulic oil (Sealey Part Number: HJO500MLS/HJO5LS) as this may cause serious damage to the hydraulic unit and will invalidate the warranty.
- ☐ **WARNING!** Always position the press against a wall. If the press is situated in the open workshop, it is essential that a guard be placed at the rear of the unit. This will prevent injury to bystanders in the event of the work piece ejecting suddenly.
- ☐ **WARNING!** The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- ▲ **DANGER!** The press is top heavy. If it requires moving after assembly or for relocation, use suitable slings around the top crossbeam, or lift direct with a forklift with the forks located under the top crossbeam. **DO NOT** use a pallet truck.

## 2. INTRODUCTION

Detachable pump and ram allowing hydraulics to be used for other purposes when press is not in use. Supplied with gauge.

## 3. SPECIFICATION

Model No:..... YK10F.V3  
 Capacity: ..... 10 Tonne  
 Gauge Included: ..... Yes  
 Maximum Height - Ram to Table: .....917mm  
 Minimum Height - Ram to Table: .....77mm  
 Operating Table Width: .....510mm  
 Overall Height: .....1657mm

Overall Width: .....792mm  
 Ram Diameter: .....Ø40mm  
 Ram Stroke: .....175mm  
 Table Aperture: .....84mm  
 Type: .....Hydraulic  
 Working Table Depth: .....180mm  
 Working Table Width: .....590mm

## 4. ASSEMBLY

Unpack the product and check contents. Should there be any damaged or missing parts contact your supplier immediately. Take care when removing components from packing as these units are heavy.

Refer to attached parts list.

Seek assistance from another person on assembly of heavy parts.

Assemble press, if possible, in close proximity to where the press will be located.

### 4.1. FRAME ASSEMBLY

- 4.1.1. Place the upright sections (#19) horizontally on a bench.
- 4.1.2. Attach the base support (#20) to the upright (#19) and the union support (#24) using hex head set screw M10 x 30 (#30) and M10 flat washer (#21), M10 spring washer (#22) and M12 nut (#15) loosely.
- 4.1.3. Repeat for the other base support (#20).
- 4.1.4. Attach the support brace (#31) to the base support (#20) and the upright (#19) using hex head set screw M8 x 25 (#29), M8 flat washer (#21), M10 spring washer (#22) and M8 nut (#23) loosely.
- 4.1.5. Repeat for the other base support (#20).
- 4.1.6. Attach the upper frame (#10) using hex head set screw M12 x 30 (#12) and M12 flat washer (#13), M12 spring washer (#14) and M12 nut (#15) loosely.
- 4.1.7. Raise the press frame into an upright position and place onto a flat level floor, and level the frame using a good quality level. Fully tighten all the bolts.

❑ **WARNING!** Take care and seek assistance from another person when lowering and levelling the frame assembly onto the floor.

### 4.2. ATTACH THE RAM

- 4.2.1. Attach the ram support plate (upper) (#6) and ram support plate (lower) (#8) to the upper frames (#10) using bolt M10x140 (#5), M8 flat washer (#21), M10 spring washer (#22) and M8 nut (#23) (tighten nuts finger tight at this stage).
- 4.2.2. Remove adaptor (#11) from the ram assembly (#3).
- 4.2.3. Pass the ram assembly through the upper support plate and onto the lower support plate.
- 4.2.4. Screw the adaptor (#11) onto the ram assembly (#3) on the under side of the lower ram support plate and tighten.
- 4.2.5. Tighten the ram support plate securing bolts (#5).

### 4.3. ATTACH THE PUMP SUPPORT

- 4.3.1. Attach the pump support (#25) to the right side upright (#19), using hex head set screw M10 x 35 (#30), M10 flat washer (#21), M10 spring washer (#22) and M10 nut (#23).

### 4.4. ATTACH THE TABLE

- 4.4.1. Insert the pins (#18) through the holes in the press frame uprights (#19) at the required height.
- 4.4.2. Taking firm hold of the table (#17) tip it into a diagonal position so it can be introduced between the main frame uprights (#19), and carefully lower it back to a horizontal position to rest on the pins (#18).

❑ **WARNING!** Take care not to allow the table to drop onto the table pins and ensure your hands and fingers are kept clear.

### 4.5. ATTACH THE PUMP

- 4.5.1. Attach the pump (#28) to the pump support (#25) using the socket cap bolt M6 x 12 (#27) and M8 flat washer (#26).
- 4.5.2. Remove the plastic safety bung from the end of the pump hose (#28) and connect the hose to the hydraulic ram assembly (#3) inlet valve.

### 4.6. ATTACH THE PRESSURE GAUGE

- 4.6.1. Remove the dust cap hex bolt from the gauge connection nut positioned at the top of the ram assembly (#3). **DO NOT** discard.
- 4.6.2. Screw the pressure gauge (#1) and nylon ring (#2) in until tight.  
× **DO NOT** over-tighten.
- 4.7. Place the arbor plates (#16) onto the table (#17).

## 5. INSTALLATION

### 5.1. SECURE THE PRESS TO THE FLOOR

- ❑ **WARNING!** Always use the assistance of another person when moving the press.
- 5.1.1. Move the press to the mounting location and spot mark through fixing holes in the base supports (#20) into the floor.
  - 5.1.2. Check for any hidden wiring or cables, if needed change the location for the holes.
  - 5.1.3. Temporarily move the press to the side.
  - 5.1.4. Use a masonry drill bit to drill the four holes about 3" to 4" deep into the concrete or wood, as necessary.
  - 5.1.5. Clean out the drilled holes.
  - 5.1.6. Position the press and align the holes in the base supports with the holes in the floor.
  - 5.1.7. Use four concrete anchor bolts or lag bolts for wooden floors, (not included), to secure to the floor.

❑ **WARNING!** To prevent serious injury **DO NOT** use damaged equipment. If abnormal noise or vibration occurs have the problem corrected.

### 5.2. BEFORE FIRST USE

- 5.2.1. Before operating the press, purge the hydraulic system, in order to eliminate any air that may have accumulated during transit. Open the release valve and pump the handle several times and close the release valve. Should the system malfunction at any time, repeating this process may resolve the problem.

▲ **DANGER!** *This model is purposefully designed to withstand greater loads than the hydraulic units can develop. For safety reasons, always ensure the workpiece and press tools are secured on the table and will not flex or suddenly "give way" causing danger to operator or the component. Also ensure you have read and understood chapter 1 safety instructions.*

## 6. OPERATION

- 6.1. Check that the hydraulic unit is fully closed ready for operating.
  - 6.1.1. Position the table at the required operating height by inserting the pins into the appropriate holes in the frame.
  - 6.1.2. Position the arbor plates or press tools to be used onto the table and align beneath the ram. Place workpiece onto the table or arbor plates and align beneath the ram as required. **Note:** Care must be taken to ensure that the arbor plates do not fall from the press table. If necessary hold the configuration in position with clamps (not supplied).
  - 6.1.3. Operate the pump slowly until the ram is close to or just touching the workpiece. Before applying real pressure to the workpiece recheck the alignment with the ram and ensure that the workpiece and press tools are supported in such a way that they cannot flex to breaking point. **DO NOT** exceed the stroke indicated on the label or the red mark on the piston and **DO NOT** apply off centre loads.
  - 6.1.4. When work is complete release the pressure by fitting the handle over the release valve and turning anti-clockwise in small increments.

6.1.5. Once the hydraulic unit has been fully retracted, remove the workpiece from the arbor plates and the table.

**Note:** Always keep the piston retracted after use to avoid corrosion.

## 7. MAINTENANCE

- 7.1. **Note:** Maintenance and repair must only be carried out by qualified person. Contact your Sealey stockist for details.
- 7.2. When the press is not in use, the hydraulic unit ram must be fully retracted to minimise corrosion. Remove the handle to inactivate the press.
- 7.3. Lubricate all moving parts at regular intervals.
- 7.4. Always keep the press clean, dry, and protected from harsh conditions.
- 7.5. Should you need to replace the oil, ensure the hydraulic unit ram is fully retracted. An excess of oil will render the press inoperative. Use only appropriate Sealey hydraulic jack oil (Sealey Part Number: HJO500MLS/HJO5LS). **DO NOT** use brake fluid. Purge the system to remove any air.
- 7.6. Check your model parts information for spares.

### **IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE MACHINE.**

Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.

**DO NOT** return the product to us. Please telephone us on 01284 757500 to obtain the address and phone number of your local agent.

If product is under guarantee please contact your stockist.

De-commissioning Product Should the product become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the product and the oil according to local regulations.



### **ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR  
PURCHASE HERE

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on [technical@sealey.co.uk](mailto:technical@sealey.co.uk) or 01284 757505.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Jack Sealey Ltd t/a Sealey Group**, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

**Jack Sealey (EU) Ltd t/a Sealey Group**, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

**Tel:** 01284 757500 - **Email:** [sales@sealey.co.uk](mailto:sales@sealey.co.uk) - **Web:** [www.sealey.co.uk](http://www.sealey.co.uk)