



SIEGEN ROLL CAB 6 DRAWER WITH 173PC TOOL KIT

MODEL NO: **S01337**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



Wear eye
protection



Warning!
Heavy load

1. SAFETY

1.1. GENERAL SAFETY

- ☐ **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this product.
 - * **DO NOT** open more than one drawer at a time.
 - * **DO NOT** step on the drawers.
 - * **DO NOT** let children play with the roll cab.
 - ✓ Ensure all drawers are fully closed and the self locking catches are activated, before moving the rollcab.
 - ✓ Secure the brakes when rollcab is in the desired position.
 - ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
 - * **DO NOT** use in damp work areas.
 - ☐ **WARNING!** The warnings, cautions and instructions referred to in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- Note! The assembly of this product will require assistance.**

1.2. SAFE USE OF HAMMERS

- ✓ Always select a suitable hammer, of appropriate type, size, and weight, for the job concerned.
- ✓ When striking chisels, punches, wedges, etc., the striking face of the hammer should be larger than the head of the tool being struck.
- ☐ **WARNING!** Always wear safety goggles when using a hammer. This is especially important when hammering hard materials and in circumstances where materials are likely to chip and fly.
- ☐ **WARNING!** Masonry nails, which are hardened, should only be struck with a lump or club hammer and it is essential that safety goggles are worn when driving these nails.
- ☐ **WARNING!** Always strike squarely and avoid glancing blows. Never strike with the side cheek of a hammer head and never strike a material which is harder than the hammer head. Never strike two hammer heads faces together.
- * **DO NOT** use a hammer with a loose or damaged handle and discard any hammer if the head shows any signs of excessive wear, mushrooming, chipping, dents, etc. Never attempt to refurbish hammer faces.
- ✓ Inspect hammers regularly to ensure that they are fit for purpose. If in doubt, seek specialist advice or contact the manufacture".

2. INTRODUCTION

173pc Comprehensive tool kit with sockets and accessories, spanners, screwdrivers, pliers, adjustable wrench, ball-pein hammer, hex keys, bits and tape measure. Each drawer fitted with catch to prevent unexpected opening when being transported around the workshop. Features two Ø125mm swivel castors, two fixed wheels and rubber grip side handles. Tools feature soft grip handles for comfort and control. Supplied in convenient foam storage trays.

3. SPECIFICATION


Model	S01337
Overall Size (W x D x H)	770 X 460 X 935 mm
Small Drawer (x3) (Internal W x D x H)	532 x 400 x 63 mm
Large Drawer (x3) (Internal W x D x H)	532 x 400 x 138 mm
Nett Weight	51kg




4. CONTENTS

6 Drawer Roll Cab	Roll cab with 6 drawers and integral handle. 2 x push-fit locking castors and 2 x push-fit fixed castors
Drawer 1	1/4"Sq Drive Standard Sockets: 4, 4.5, 5, 5.5, 6, 7, 8, 9, 10, 11, 12, 13, 14mm. 1/4"Sq Drive Deep Sockets: 6, 7, 8, 9, 10, 11, 12, 13mm. 1/2"Sq Drive Standard Sockets: 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 21, 22, 24, 27, 30, 32mm. 1/2"Sq Drive Deep Sockets: 14, 15, 17, 19, 21, 22, 24mm. 1/4"Sq Drive Accessories: 72-Tooth Reversible Ratchet Wrench, Extension Bars - 50, 100mm, Flexible Extension Bar 150mm, Sliding T-Bar, Spinner Handle, Universal Joint, 1/4" Hex Bit Adaptor 30mm. 1/2"Sq Drive Accessories: 72-Tooth Reversible Ratchet Wrench, Extension Bars - 125, 250mm, Universal Joint, T-Bar Adaptor, 8mm Hex Bit Adaptor, 1/4"Hex Bits: Slotted; 8, 10, 12, Phillips; #3, #4, Pozi; #3, #4, Hex; 8, 10, 12, 14mm, TRX-Star*; T40, T45, T50, T55 1/4"Sq Drive Socket Bits: Slotted; 4, 5.5, 7mm, Phillips; #1, #2, Pozi; #1, #2, Hex; 3, 4, 5, 6mm, TRX-Star*; T8, T10, T15, T20, T25, T30
Drawer 2	Combination Spanners: 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 22, 24mm. Deep Offset Spanners: 6 x 7, 8 x 9, 10 x 11, 12 x 13, 14 x 15, 16 x 17, 18 x 19, 20 x 22mm
Drawer 3	Screwdrivers: Slotted - 6 x 38, 3 x 75, 4 x 100, 5 x 125, 6 x 150, 8 x 200mm, Phillips - #2 x 38, #1 x 75, #2 x 100, Pozi - #1 x 75, #2 x 100, TRX-Star* - T10 x 100, T15 x 100, T20 x 100, T25 x 100, T27 x 100, T30 x 100. Hex Keys: 1.5, 2, 2.5, 3, 4, 5, 6, 8, 10mm. TRX-Star* Keys: T10, T15, T20, T25, T27, T30, T40, T45, T50. Bits: Phillips - #000, Pozi - #2, #3, TRX-Star* - T7, T8, T9, Hex - 3, 4, 5, 6mm, Bit Holder
Drawer 4	Adjustable Wrench 200mm. Side Cutters 160mm. Ball Pein Hammer 16oz. Measuring Tape 5m. Pliers: 250mm Water Pump Pliers, 200mm Long Nose Pliers, 175mm Combination Pliers, 180mm Locking Pliers. Circlip Pliers (19-60mm Capacity): Bent-External, Straight-External, Bent-Internal, Straight-Internal,

 
Drawer 1

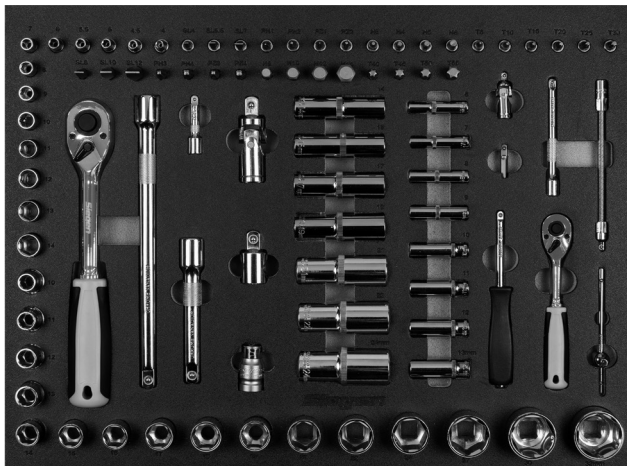

Drawer 2

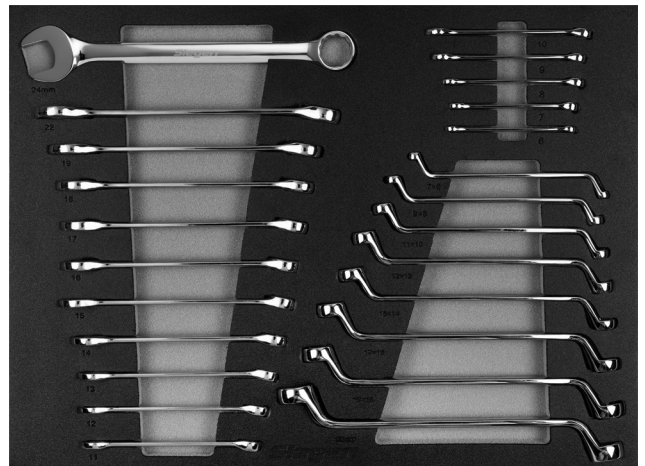 

Drawer 3

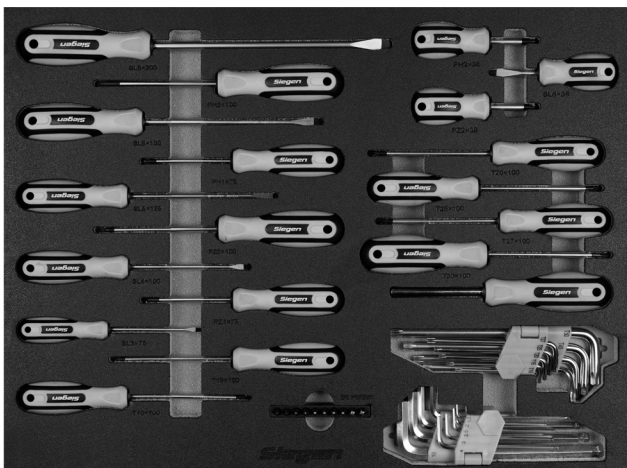 

Drawer 4



5. ASSEMBLY

- 5.1. The only assembly required is the fitting of the castor wheels.
 - 5.2. These are a simple push fit and no tools are required.
- ❑ **WARNING! HEAVY PRODUCT!** The fitting of the wheels will require assistance from at least one more person to prevent the possibility of personal injury and/or damage to the product.
 - ❑ The two locking castor wheels should be fitted to the end of the rollcab that has the handle (fig.1).
 - ❑ The two fixed castor wheels are fitted at the opposite end.

6. OPERATION

6.1. DRAWER LOCKS

- 6.1.1. Each drawer, including the pull-out parts bin and bin storage, has an automatic locking mechanism when the drawer is closed.
- 6.1.2. To open a drawer, push the unlock lever to the left (fig.2.1) whilst pulling the drawer by the handle. This releases the sprung latch (fig.2.2).

- ❑ **WARNING!** Only open one drawer at a time and **DO NOT** overload the drawers.

6.2. DRAWER REMOVAL

- 6.2.1. Fully empty the drawer and extend out all the way. Push up the release lever on the left side and push down the release lever on the right side (fig.3)

6.3. REFITTING A DRAWER (fig.4)

- 6.3.1. Pull out both drawer rails until fully extended. Align the slides on the drawer with the drawer rails. Slightly insert one side and repeat for the other side. Slowly push the drawer until it is fully closed in order to engage the drawer stops.
- ❑ **WARNING!** When moving the rollcab, ensure that the drawers are closed and locked to prevent accidental opening, release the two brakes by flipping the lever lock upwards and move the rollcab using the handle to maintain full control. When the rollcab has been moved to the required location, lock the brakes.
 - ❑ **WARNING! DO NOT** move across slopes of more than 5° as the rollcab may tilt over.

7. MAINTENANCE

- 7.1. Lubricate the drawer slides sparingly every six months.
- 7.2. Clean the metalwork periodically with warm water and a mild detergent.
- 7.3. Stubborn grease and oil marks can be removed by using a non-abrasive cleaner.

fig.1



fig.2

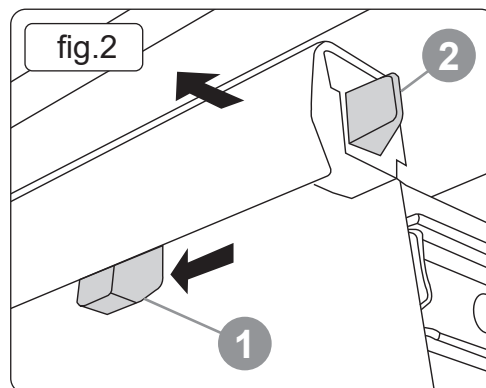 


fig.3


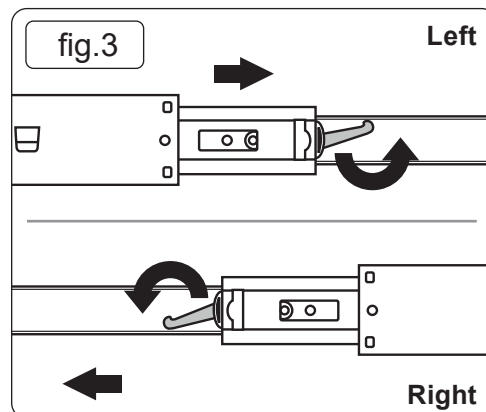 


fig.4

 

ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

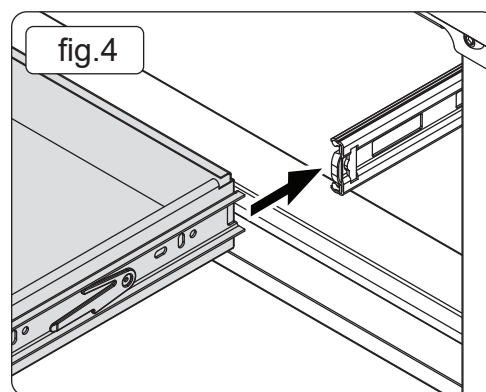

REGISTER YOUR PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: 24 month guarantee. Proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk